VIKING INDUSTRIER

GRILL CABIN 25

PRODUCT DESCRIPTION

Grill Cabin 25 m2 invites you to pleasantly spend your weekends, celebrate holidays with a large group of friends, organize events or get-togethers of your relatives. It will easily fit about thirty people.

Huge space, delicious grill steaks and fire heat will create the best mood for smaller or bigger celebrations.

High-quality materials ensure the longevity of a grill house and easy use. Eight cabin walls are made of rounded spruce boards with the dimensions 45 x 145 mm.

The roof is covered with bitumen shingles (different colors can be selected), and there are four double glazed windows, two of which open. Besides that, doors are decorated with an original hexagonal window.

Also, there are seven benches in the cabin; two of these benches easily transform into sleeping benches: just turn over the additional board. Floor is easily assembled from separate components.

There is a convenient wood- or charcoal-fired grill with a table around it inside the cabin. Also, one adjustable cooking platform and two special platforms for a kettle, frying pan, etc. can be found.

Above the grill there is an adjustable chimney. Finally, the cabin is lockable, and there is a small porch with a roof at the entrance.



SPECIFICATION

People	25-30 persons
Timber	Spruce
Shape	Octagonal
Room	1
Inside area	25.0 m^2
Total height	4566 mm
Wall height	1155 mm
Floor thickness	18 mm
Roof thickness	18 mm
Wall thickness	45 mm
External dimension	5450 x 5450 mm
Door size	782 x 1760 mm
Window size	880 x 510 mm

STANDARD SET

Wall, floor, roof panels from spruce;

Roof covered with bitumen shingles of your selected color;

Inside standard grill with cooking platforms;

Table around the grill;

Adjustable chimney;

4 double glass windows (2 of them are opening);

Door with a lock and hexagon window;

7 inside benches from spruce (2 of them are folding benches);

Cushions for benches of your selected color: brown or blue.

DELIVERY

Assembling time	8 hours
Weight	2300 kg

Grill Cabin is delivered to the customer fully complete, with detailed assembly instructions and drawings, and packed on a pallet (KIT). Three people can assemble the Grill Cabin in 8 hours.

- **Grill cabin is packed on a pallet (L x W x H):** 4.55 x 1.20 x 2.60 m;
- Weight: 2300 kg.
- **The standard grill** is packed on a **separate pallet** of size (L x W x H): 0.90 x 1.20 x 1.50 m. Please write a comment if you want the grill to be put in a box.
- **"Viking" grill** is packed only on a separate pallet. Size (L x W x H): 1.05 x 1.05 x 0.86 m.
- **"Luxury" grill** is packed only on a separate pallet of size (L x W x H): 0.9 x 1.2 x 1.25 m.

~ We pack all accessories on the same pallet if it is possible. Otherwise, all accessories will be packed on a separate pallet.

GRILL AND CHIMNEY SET



"Premium" 8-corner Grill and Chimney set



"Viking Premium" Grill and Chimney



"Viking" Grill and Chimney



Standard 8-corner Grill and Chimney



Luxury Grill and Chimney



Without Grill and Chimney

OPTIONS

AVAILABLE ROOF COLOR


Black shingles


Green shingles


Red shingles

BENCHES AND CUSHIONS:

- Benches + brown cushions;
- Benches + blue cushions;
- Without cushions;
- Without benches and cushions.





OPENING WINDOWS FOR GRILL CABIN 25

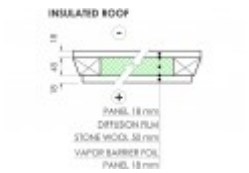
- 2 opening windows from 4 (standard);
- 3 opening windows from 4;
- 4 opening windows from 4.



WALLS HEIGHT

- One extra board in wall *(the height of board - 145 mm)*
- Two extra boards in wall

INSULATED ROOF



INSULATED FLOOR



TONGUE AND GROOVE FLOORS (28 MM)



ACCESSORIES


Blue curtains set


Brown curtains set


Drawer


Shelf for Grill cabin


Firewood ring

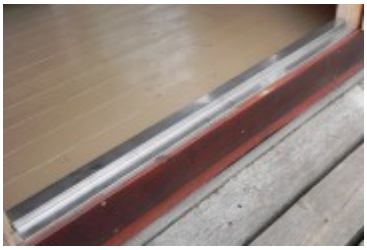

Grill Chimney Extension


Grill cover 8 corners


Grill table safety fence 8 corners*


Reindeer hides


Wooden dishes and flatware set**


Stainless steel door sill

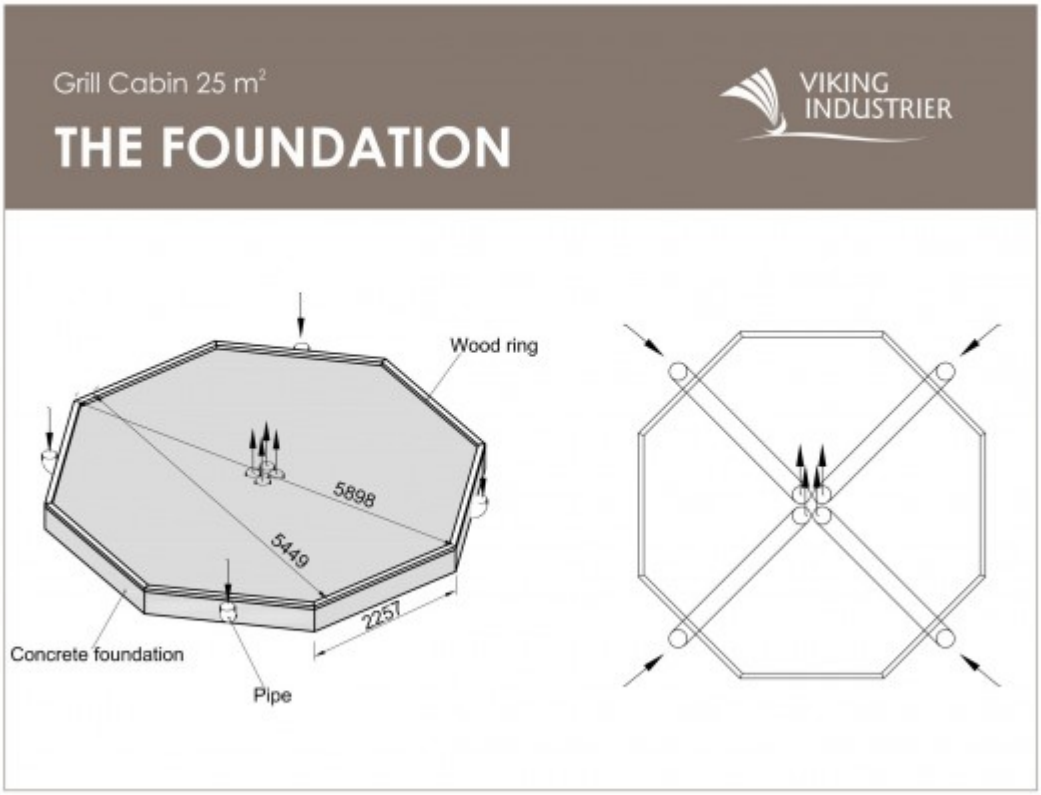

Door stopper


Table And Benches set for 25 m2 Cabins

* *Only for Standard 8-corner grill and chimney set*

***Available "Basic", "Optimal" or "Luxury" set.*

FOUNDATION



It is very important to have a proper base for your Grill Cabin. Therefore, we recommend following our sketches and consulting a qualified local builder or engineer. Making sure that the base for your product fits the location is of utmost importance.
Due to an improper base, the structure may crack. If the product is unevenly seated, the geometric shape of the building may change, which can result in the door/windows twisting, and/or gaps. In the worst-case scenario, the product may even collapse.

- Before building the base, make sure you take into account the landscape and the ground conditions on which the product will stand.
- The base under the product must be prepared specifically for the product.
- The base must be homogeneous, tight, and level.
- Make sure that the properties of the base do not change over time. We recommend making the base out of concrete and water-proofing it before installation.

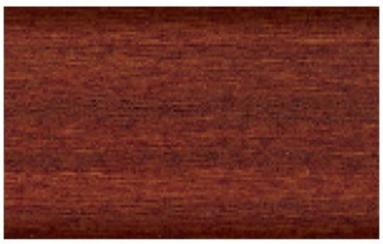
If you do not follow recommendations for building the base, the product will lose its warranty!

COLOR CARD

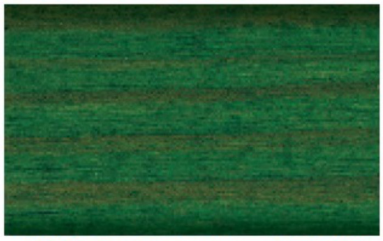
EXTERIOR WOOD STAIN COLORS

Water-based, quick drying premium total protection for wood outside.
Thin layer varnish – 3 in 1: impregnation, primer, and varnish!


PINE / LARCH RC260


TEAK RC545


CHESTNUT RC555


FIR GREEN RC960


MAHAGONY RC565


PALISANDER RC720


SILVER GREY RC970


NUT WOOD RC660


PINE RC270


RUSTIC OAK RC360


LIGHT OAK RC365


HEMLOCK RC120


WHITE RC990


EBONY RC790


SALT GREEN RC965

PLEASE NOTE: The colors shown in the catalogue and website may not 100% match the color you will receive. The color of the wood material affects the final color.

COLOR CARD

EXTERIOR WOOD PAINT COLORS

Weather protection, water-based paints. High-performance and environmentally friendly.

WHITE / RAL 9016

ANTRACITE GREY / RAL 7016

LIGHT GREY / RAL 7035

DUSTY GREY / RAL 7037

OXIDE RED / RAL 3009

JET BLACK / RAL 9005

MOSS GREEN / RAL 6005

AZURE BLUE / RAL 5009

GREY BROWN / RAL 8019

BROWN RED / RAL 3011

PLEASE NOTE: The colors shown in the catalogue and website may not 100% match the color you will receive. The color of the wood material affects the final color.

PAINTING

AUTOMATIC MACHINE SPRAY TECHNOLOGY
Benefits

One of the main and most obvious benefits of using a paint machine is the speed and flexibility at which we can suggest our painting service for all of our products. A spray paint machine can get the work done faster and more consistently than manually painting. While the machine works faster, it improves quality too – sprayers produce an even coat of paint, leaving a high-quality finish.
With our painting service from now, we can suggest to our client maximum flexibility! Not assembled products such as Grill cabins, Pavilions, Camping pods, and other products of any size you can order painted too!

PROFESSIONAL SPRAY

The high-quality preservative finish is professionally spray applied in the factory to three sides of the wood. The product is treated in your choice of color. You can choose two colors for one product: one for almost all product details and another for finishing details.

STAIN | PAINT
Which type of paint should I Use?

Properly painting and impregnating is one of the most important things to consider when thinking about how to extend your product's lifetime.
Paint and natural wood finish instantly spruce up the aesthetics of your product.
The decision you will need to make is if you want to use a water-based wood stain or paint. Both will offer you UV protection. The wood stains will allow the texture of the
wood to show through and many are now available in a vast range of colors, however, paints will give you an intensive color, but will cover the grain and texture of the wood.

USAGE AND MAINTENANCE

USAGE.

- **The first time you'll use your Grill the surfaces of the new product that are in direct contact with the flames may create a smoky smell when heating up.** We advise to keep the door open during the first use and not to cook until the smell disappears.
- When burning wood we recommend use a Grill table metal safety fence.
- We suggest you use only firewood or briquettes. Larger burning objects can be added later when the fire is burning well. We advise using objects no larger than 300 mm.
- A sufficient flow of fresh air is the most essential aspect of smoke exhaustion. At least as much fresh air should come in as goes out with the smoke.
- If the Grill is generating a lot of smoke, open the door of the Grill Cabin and make sure that the wood is dry and without a bark. Put in additional dry wood if needed.
- Keep decorations away from your Grill. Hanging decorations look pretty, but provide fuel for a fire.
- Keep water nearby for flare-ups.
- **Keep a fire extinguisher within a couple of steps of your Grill**. And KNOW HOW TO USE IT!
- **Don't leave a grill unattended**. Don't allow kids or pets to play near the Grill. Never try to move the hot Grill, and remember the Grill will stay hot for at least an hour after its use.
- Do not sleep in a Grill Cabin when the fire is on!
- Use protective gloves when handling hot cooking plates. **Never move or service an operating Grill.**
- Please note, that the metal Grill may have sharp edges and the steel parts of the grill heat up when the fire is burning, therefore there is a risk to harm or burn yourself.
- Remove ashes from the Grill after they have cooled down.
- Make sure you give yourself time to clean your grill after each use in order to ensure maximum hygiene and proper functioning.

MAINTENANCE.

You should not forget that wood is a natural material, it changes and moves depending on weather conditions. Large and small cracks, color tone differences and other changes, as well as a changing structure of wood are not defects, but a result of wood growing and a feature of wood as a natural material. Natural wood (not impregnated) becomes greyish after being left untouched for a while and can turn blue and become mouldy. You should immediately process it with a wood preservative to protect the wooden parts of our manufactured products.

We definitely recommend that you process the door and windows with a wood preservative, and do it on both sides (inside and outside), because the doors and windows can deform. Also, you should pre-treat the floor panels with a wood preservative, especially the bottom sides of the panels, to which you will no longer have access when the Cabin is assembled. Only this will prevent moisture penetration.

In general, we recommend for the conclusive finishing a weather protection paint that will protect the wood from moisture and UV radiation after the Cabin is assembled. Consult a specialist regarding paints suitable for unprocessed softwood and follow the paint manufacturer's instructions. Your Grill Cabin service life will be much longer after it will be properly painted. **We recommend that you inspect your Cabin thoroughly once every six months**.

The customer should make sure that air circulation is working in winter as well. It means that air pipes are open all year round and that moisture gets out from the product (through the chimney). The customer should also make sure that the product´s roof is not covered by snow. A layer of snow cannot be thicker than 20 cm on the roof and the flue should never be covered by snow or closed manually.



Misko 25, LT-85302 Venta, Lithuania
info@vikingindustrier.com